NOTE: The appliance can be used on virtually all articles of clothing and fabrics in the home. Fabrics containing acrylics, nylon or similar materials may not be treated. If you have any doubts. we recommend that you test the appliance on the inside fabric of the garment. With delicate materials. such as silk or velvet, remove the clothes brush and'steam the material from a distance.

CARE OF CLOTHES

Hang the creased article of clothing on a clothes hanger. Pull the clothing tight with one hand, place the appliance over the creased area. Gently press the appliance against the clothing. and press and release the Shot of Steam® button. In this way, steam will penetrate right into the fabric, and not just pass over the surface. Now move the appliance down over the fabric. When doing so, press the Shot of Steam® button several times and at the same time smooth the material with the clothes brush. After treatment, let the article of clothing cool on the hanger.

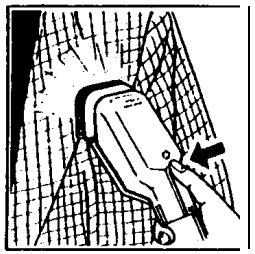

CARE OF CURTAINS AND UPHOLSTERY

Creases c-I be removed from curtains while they are hanging on the rod; slmply follow the procedure described in "Care of Clothes". The appearance of upholstery can also be improved by steaming with the appliance. If the appliance is being used in a horizontal position best results are achieved by holding it upright occasionally.

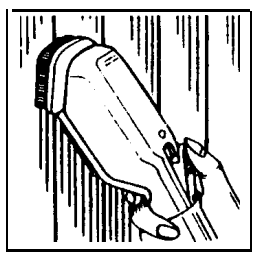

REMOVAL OF LINT AND FLUFF

Lint, threads, fluff and hair can easily be removed with the lint brush. It has a reversible actlon for right or left. handed use.

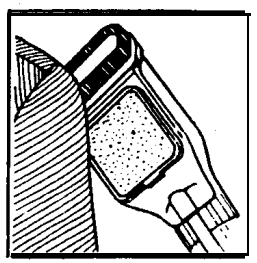

EMPTYING THE WATER TANK

Remove the plug from the electrical outlet and allow the appliance to cool down. If you do not intend to use the appliance again soon, It is advisable to drain the water from the tank.

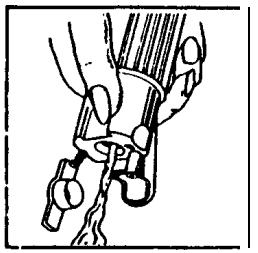

STORAGE

The appliance may be stored by means of the hanging loop or placed on a clean, dry shelf. When traveling it can be packed into the travel pouch provided.

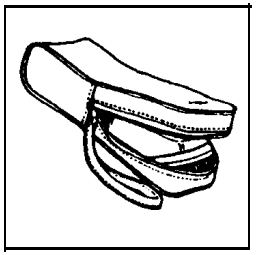

MAINTENANCE

The body and front panel (when cool) should occasionally be wiped with a moist cloth.

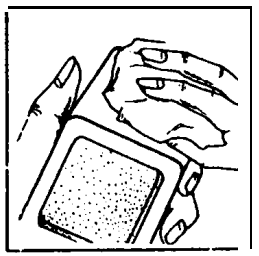

Sunbeam

SUNBEAM APPLIANCE COMPANY
a member company of (Al) Allegheny International
® SUNBEAM
© SUNBEAM APPLIANCE COMPANY, 1966 3633007624

Sunbeam

"STEAM VALET" GARMENT STEAMER INSTRUCTIONS

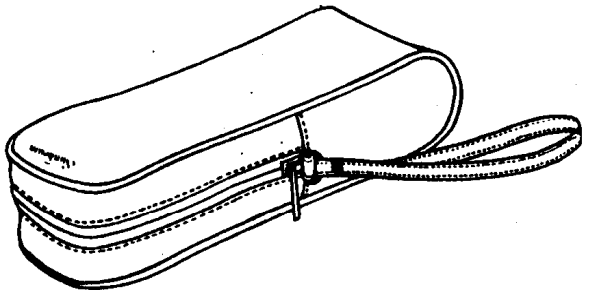

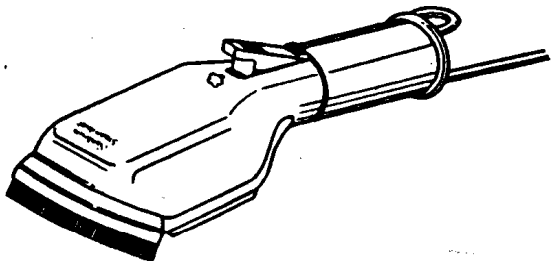

IMPORTANT SAFEGUARDS

When using your garment steamer, basic safety precautions should always be lollowed, including the following:

1. Read all instructions before using the garment steamer.
2. Use garment steamer only for its intended use.
3. To protect against a risk of electric shock, do not immerse the garmenl steamer in water or other liquids
4. Never yank cord to disconnect from outlet; instead, grasp plug and pull to disconnect.
5. Do not allow cord to touch hot surfaces. Loop cord loosely around garment steamer when storlng.
6. Do not operate garment steamer with a damaged cord or if the garment steamer has been dropped or damaged. To avoid the risk of electric shock, do not disassemble the garment steamer. Take it to the nearest Sunbeam Appliance Service Company station or authorized independent service station for examination and repair. Incorrect reassembly can cause a risk of electric shock when the garment steamer is used.
7. Close supervision is necessary for any appliance being used by or near children. Do not leave garment steamer unattended while connected.
6. Burns can occur from contact with hot water, or steam. Use caution when you turn the garment steamer upside down-there may be hot water in the reservoir.
9. The use of accessory attachments not recommended by Sunbeam Appliance Company may result in fire, electric shock or personal injury.

SAVE THESE INSTRUCTIONS

CAUTION: Never point garment steamer at another person

Unpack the appliance. Please read the instructions carefully before use, and keep in a safe place for future reference.

FEATURES OF YOUR SUNBEAM GARMENT STEAMER

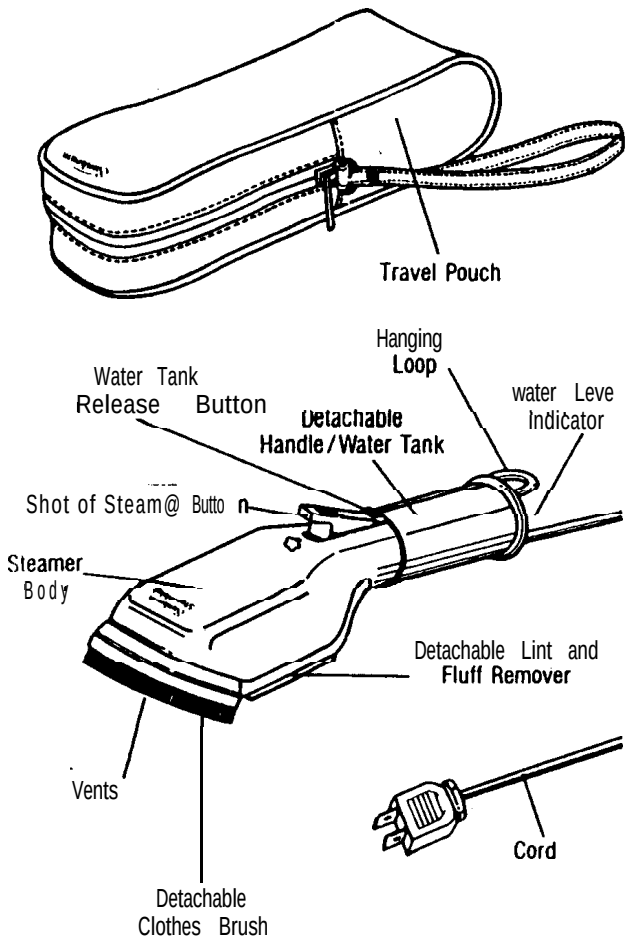

REMOVING THE WATER TANK .

Press the water tank release button and pull the handle and button assembly away from the body of the steamer.

WATER

Tap water may be used, however, In areas of the country where the water is very hard we recommend the use of demineralized or distilled water lo prolong the steaming function of your appliance. DO NOT use water passed through home water softening systems because such water contains minerals that may be harmful to the garment steamer's internal components.

Insert the filled water lank back Into the steamer assembly with the button projection on the tank nesting into the button slot on the steamer.

WATER LEVEL INDICATOR

The water level indicator shows at any time whether there is sufficient water in the lank. To check the reservoir level, hold garment steamer so that the waler window is vertical. Check level and refill as necessary.

USING THE GARMENT STEAMER

Plug the cord into a 120 volt, AC electrical outlet. After about 45 seconds It will reach working temperature. A jet of steam can then be produced about every 2 seconds by pressing the steam button.